

Straight Track for Lead Curtain 683680



Mill finish 6063-T5 extruded aluminum
1-3/4" wide x 2" high, .080 thick.
Priced per linear foot.


INCLUDES:

- 1 Straight Track
- 2 End Stops
- 1 Single Carrier for each grommet hole of curtain

OPTIONS:


- Clamp Hanger
- Ceiling Splice
- Trim Chain

OPTIONS:

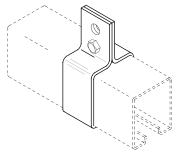

Clamp Hanger

Formed steel brackets clamp to track. Adjusts to any position. Suspend track with welded chain or wire rope. 1 pair pictured.

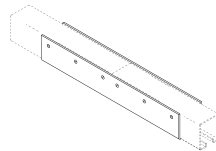

Ceiling Splice

To align and lock track sections together on ceiling mounted tracks. 1 pair pictured.

Note: Cannot be used with No. 132 Overlap Master or No. 10 Pivot Device due to interference with the wheels.



Trim Chain

3 links No.10 single jack chain added to carriers to provide 3" of curtain height adjustment